



## Printing Tips:

---

### Printing Instructions in PDF Format

---

Downloadable Instruction Sheets - Updated Instruction Sheets for all Pictorico Inkjet Media products in Adobe Acrobat (.pdf) format.

### How to Print Pictorico 4 x 6" sheets in an Epson Printer

---

The Epson 4 x 6" paper setting is designed for a sheet slightly larger than that size, so you will need to customize your paper setting when using Pictorico 4 x 6" sheets. Here's how you can do it:

1. Go to **File** → **Page Setup**.
2. In the **Page Setup** window, click on the **Properties** button.
3. Go to the **Paper** tab and select **User Defined** from the "Paper Size" drop-down menu.
4. Type **Pictorico 4 x 6"** in the "Paper Size Name" form field.
5. Enter **400** as your "width" and **600** as your "height".
6. Make sure that **0.01 in.** is selected as your "Unit" of measurement.
7. Click **Save**.
8. Make sure **Maximum** is selected in the "Printable Area" if you wish to print up to a 0.25" border.
9. **Pictorico 4 x 6"** will now be permanently listed in the "Paper Size" drop-down menu the next time you wish to use the printer driver.