

Use the highest resolution available on your printer, and try the recommended printer settings below or equivalent media settings. Due to variations among printer and ink manufacturers, some experimentation with output settings may be required for optimal results. Please refer to your printer manual for specific recommendations. Recommended for use with dye-based inks for Premium WaterColor Card Stock Media.

Epson Print Setup for 4 x 6" Products:

Go to File → Print → Properties → Paper tab → Paper Size

Select "User Defined" and enter 460 as width and 600 as height (Epson expresses units in hundredths of an inch). Make sure that inches (0.01 in.) is selected in the window.

Pictorico Product	Epson	Canon	Hewlett-Packard
Photo Gallery Hi-Gloss White Film	Epson Glossy Paper; Epson Photo Paper; Premium Semigloss Photo Paper; Glossy Paper-Photo Weight; or Photo Quality Glossy Film	Photo Paper Pro; Photo Paper Plus Glossy; or High Gloss Film	HP Premium Plus Photo Paper, Glossy; HP Premium Plus Photo Paper; or Premium Photo Paper
Photo Gallery Glossy Paper	Epson Glossy Paper; Epson Photo Paper; Premium Semigloss Photo Paper; Glossy Paper-Photo Weight; or Photo Quality Glossy Film	Photo Paper Pro; Photo Paper Plus Glossy; or Glossy Paper	HP Premium Plus Photo Paper, Glossy; HP Premium Plus Photo Paper; or Premium Photo Paper
Premium Photo Glossy Paper	Epson Glossy Paper; Epson Photo Paper; Premium Semigloss Photo Paper; Glossy Paper-Photo Weight; or Photo Quality Glossy Film	Photo Paper Pro; Photo Paper Plus Glossy; or Glossy Paper	HP Premium Plus Photo Paper, Glossy; HP Premium Plus Photo Paper; or Premium Photo Paper
Premium DualSide Photo Paper	Epson Glossy Paper; Epson Photo Paper; Premium Semigloss Photo Paper; Glossy Paper-Photo Weight; or Photo Quality Glossy Film	Photo Paper Pro; Photo Paper Plus Glossy; or Glossy Paper	HP Premium Plus Photo Paper, Glossy; HP Premium Plus Photo Paper; or Premium Photo Paper
Premium Canvas	Epson Glossy Paper; Epson Photo Paper; or Photo Quality Glossy Film	Photo Paper Pro; Photo Paper Plus Glossy; or High Resolution Paper	HP Premium Plus Photo Paper, Glossy; HP Premium Plus Photo Paper; or Premium Inkjet Paper
Premium PolySilk Fabric	Epson Glossy Paper; Epson Photo Paper; or Photo Quality Glossy Film	Photo Paper Pro; Photo Paper Plus Glossy; or Glossy Paper	HP Premium Plus Photo Paper, Glossy; HP Premium Plus Photo Paper; or Premium Photo Paper
Premium OHP Transparency Film	Epson Glossy Paper; Epson Photo Paper; Premium Semigloss Photo Paper; Glossy Paper-Photo Weight; or Inkjet Transparencies	Photo Paper Pro; Photo Paper Plus Glossy; or Transparency	HP Premium Plus Photo Paper, Glossy; HP Premium Plus Photo Paper; or Transparency
Premium WaterColor Card Stock	Epson Glossy Paper; Epson Photo Paper; or Photo Quality Glossy Film	Photo Paper Pro; Photo Paper Plus Glossy; or High Resolution Paper	HP Premium Plus Photo Paper, Glossy; HP Premium Plus Photo Paper; or Premium Inkjet Paper